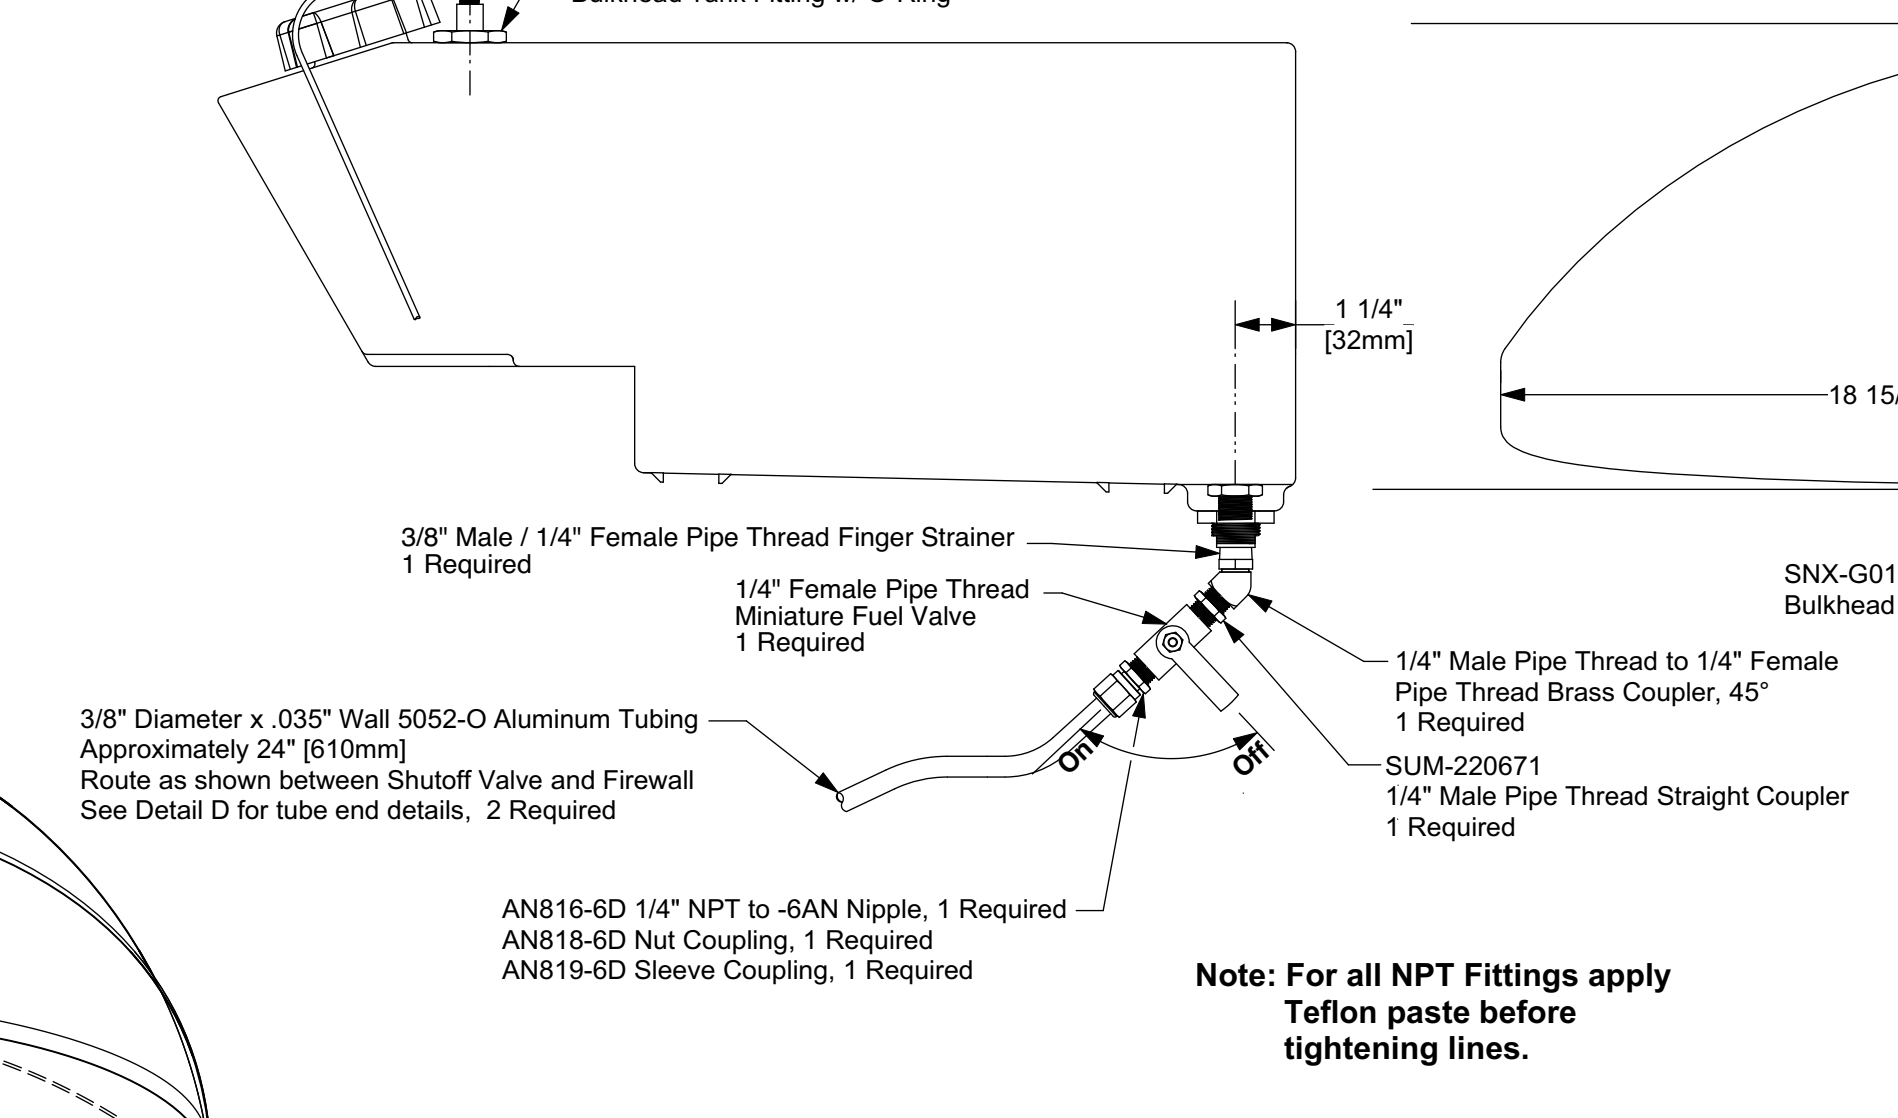


**Note: For all NPT Fittings apply Teflon paste before tightening lines.**